

## ENGLISH

### Function

Combined with a garage door operator, the latching set allows the latches of an up-and-over door to engage or disengage before the garage door operator causes the door to open.

To ensure optimum operation and functioning of the latching set, observe the following instructions in full!

### N 80 Up-and-Over Doors

#### Figure 1.1

Fit the door link centrally on the top part of the door.

#### Figure 1.2

If the latches on the door are fixed, these should now be released.

Fit the latching set as shown in the figures.

### Figure 1.7-1.8

Fasten the cable via the cable eyelet onto the toothed wheel and clamp onto the cable clamp of the door link; afterwards also adjust the length of the cable here.

### DF 98 Up-and-Over Doors

#### Figure 2.1

Fit the door link centrally on the top part of the door.

#### Figure 2.2

If the latches on the door are fixed, these should now be released.

Fit the latching set as shown in the following figures.

### Figure 2.5-2.6

Clamp one end of the cable onto the lock clamp and the other onto the door link clamp; afterwards also adjust the length of the cable here.

### Note:

Adjust the length of the cable with minimum tautness. Due to the various door types, the latching set is individually set for each door!



### Attention!

**In order to ensure that the latching set is functioning correctly, it is advisable to test it several times once it has been fitted. It might be necessary to re-adjust the garage door operator.**



### Tip

 
On shortening the wire cable, it is advisable to wrap strong adhesive tape around the point at which the cable is to be cut to prevent it from splicing.

### N 80 up-and-over doors

see figure 1.8




### DF 98 up-and-over doors

see figure 2.6


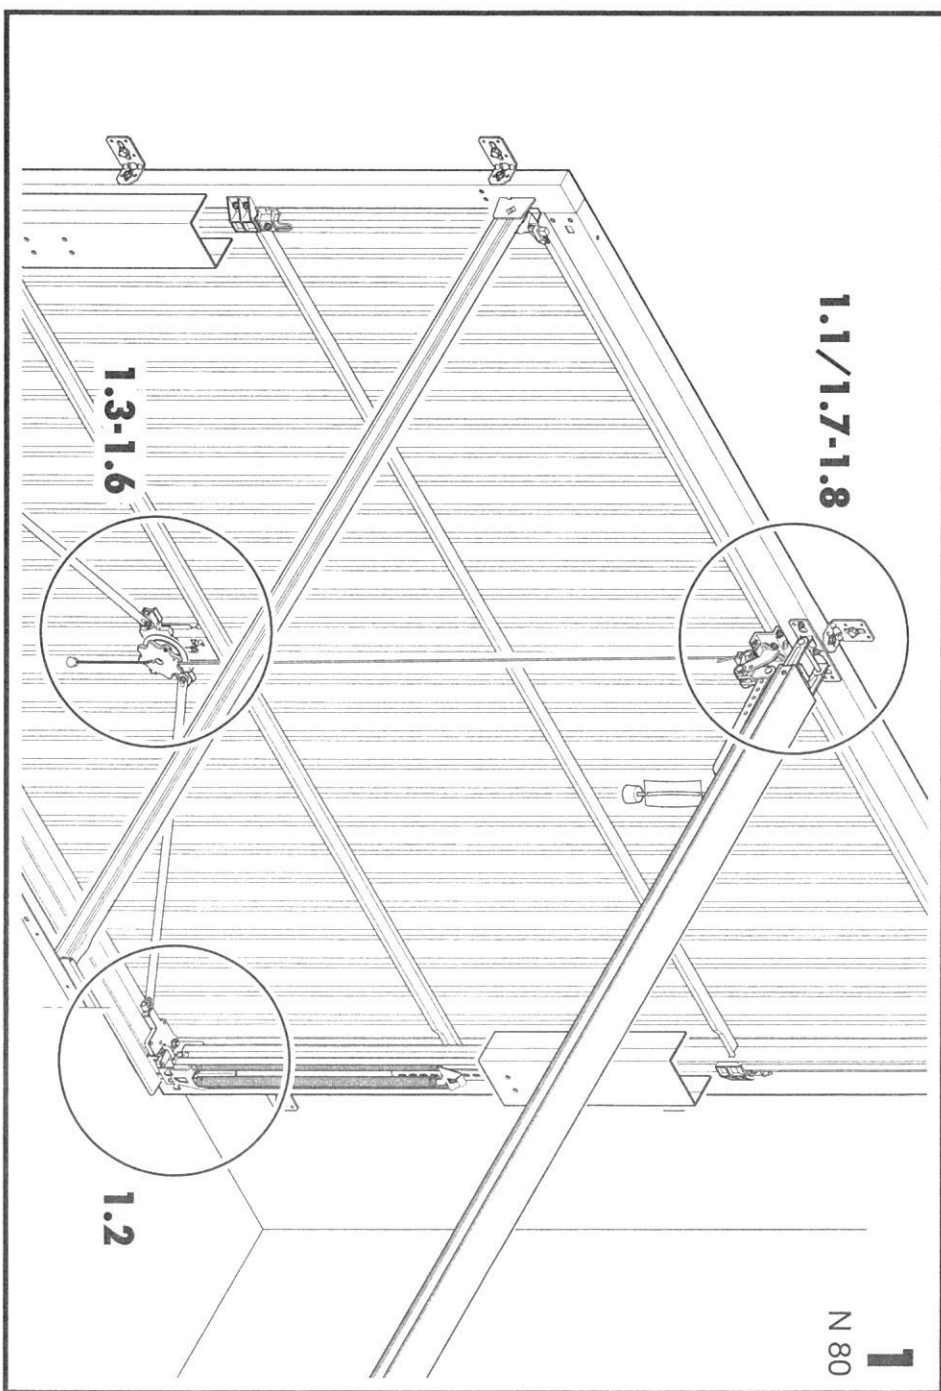


30

   12.2006 TR30A017-A RE

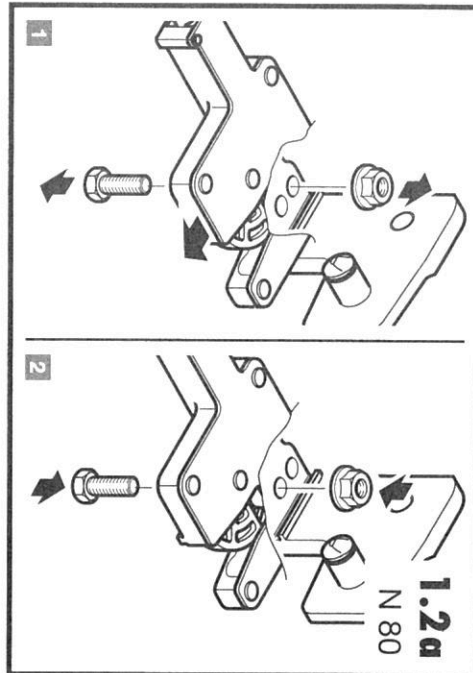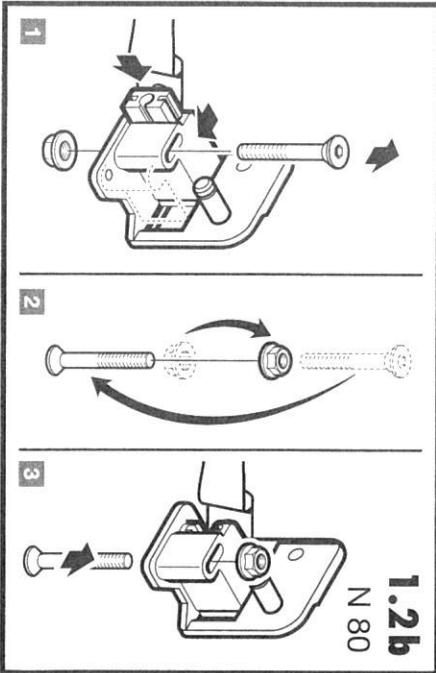
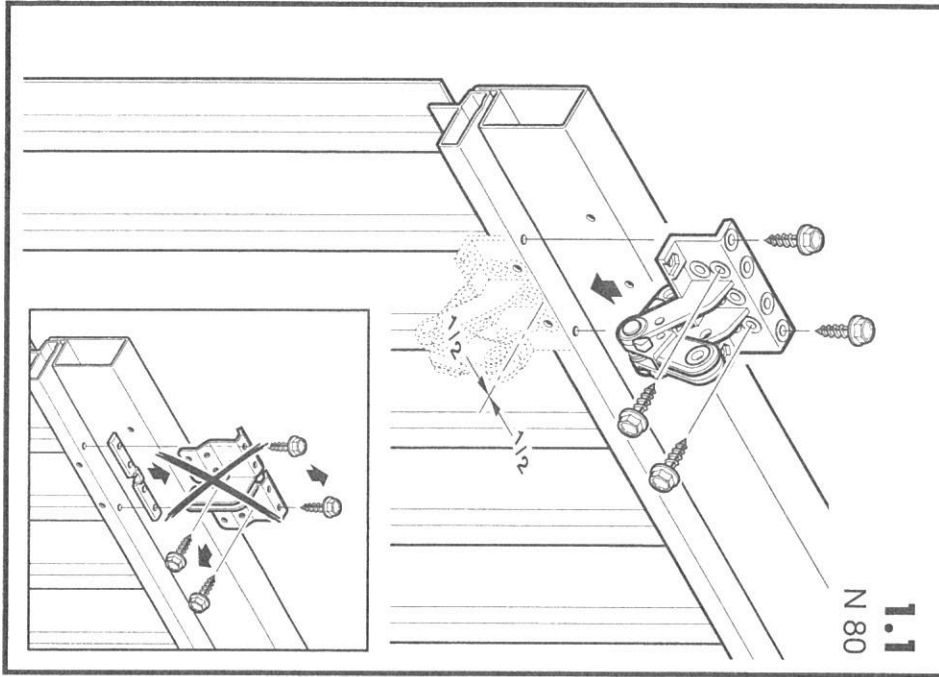


32

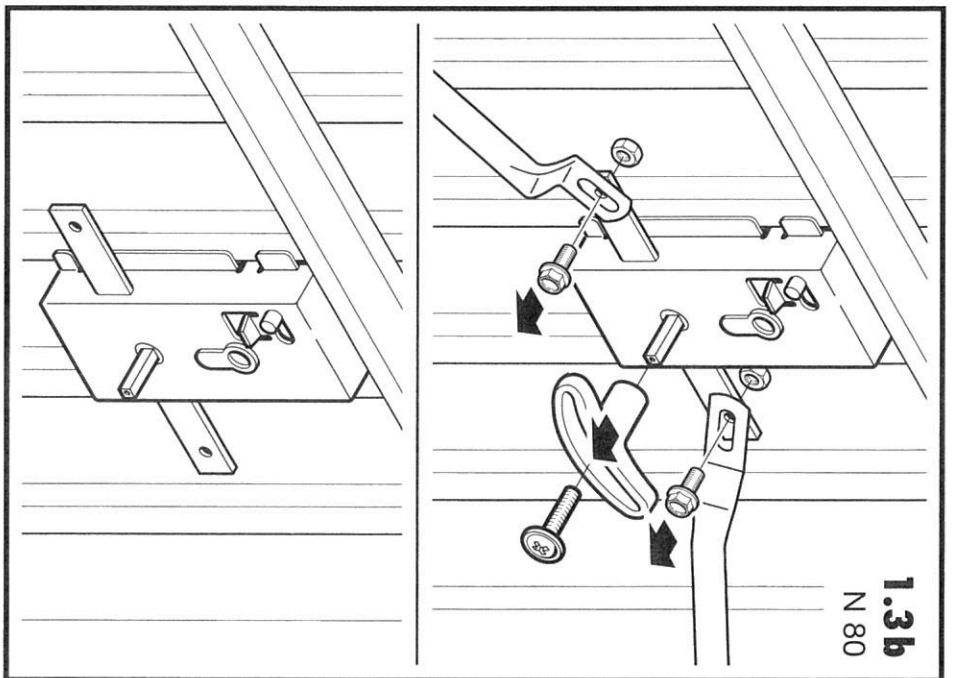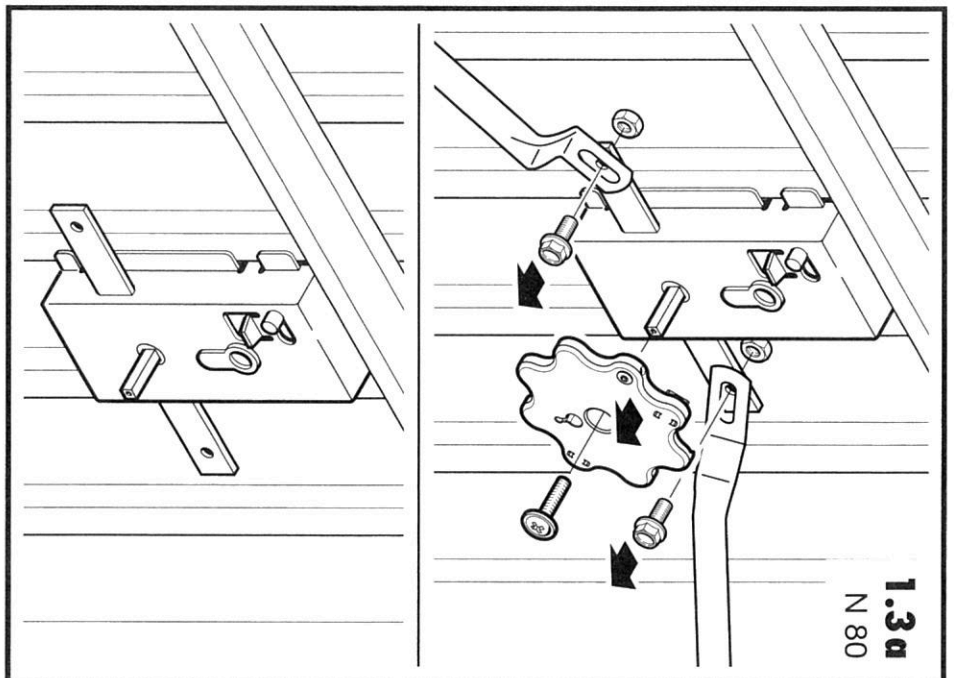  


12.2006 TR30A017-A RE

  1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100

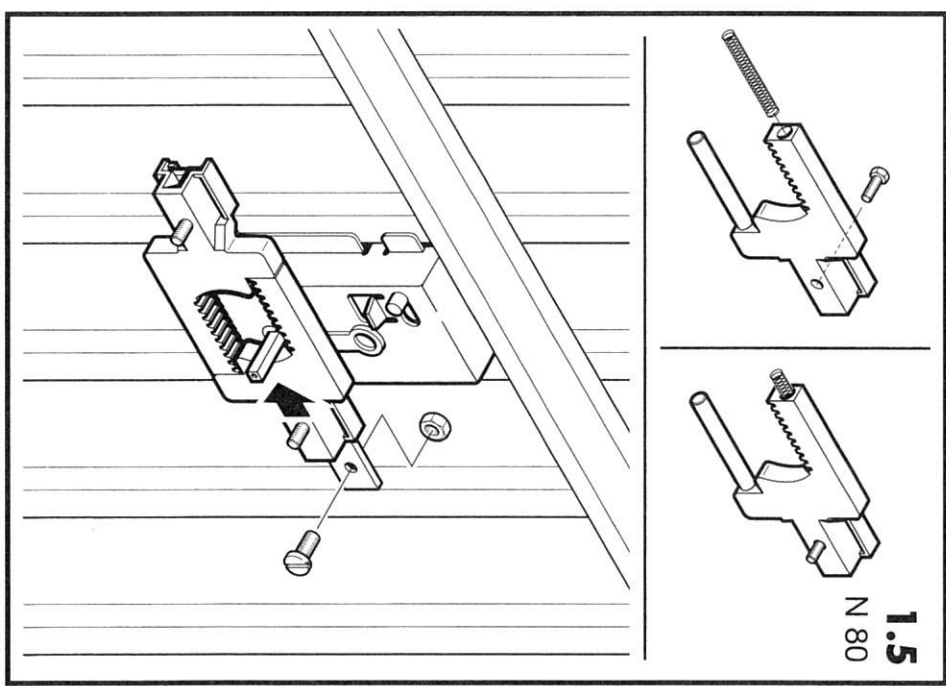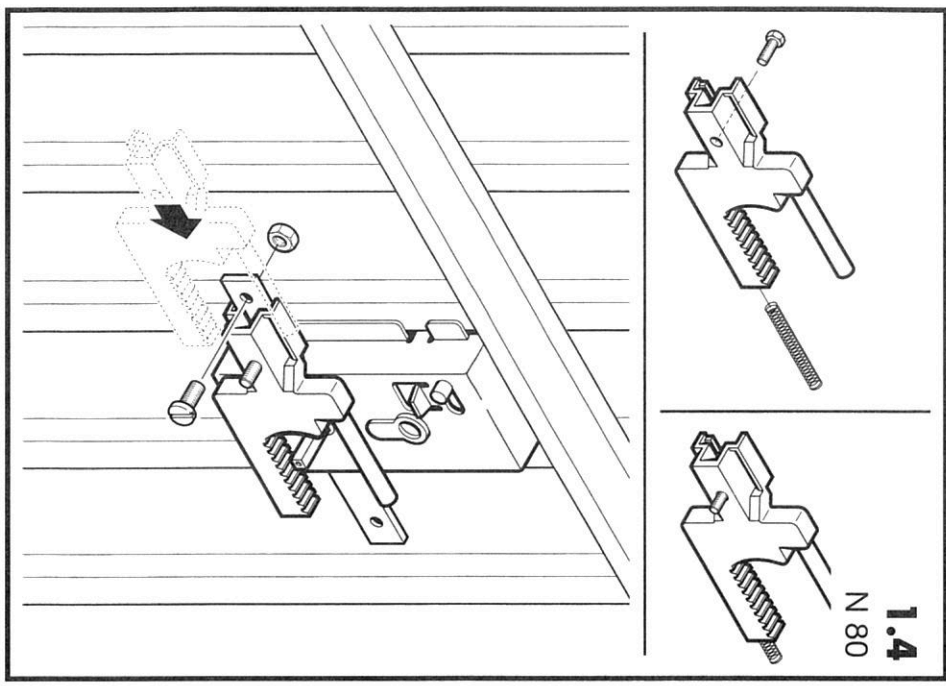



101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200

 34

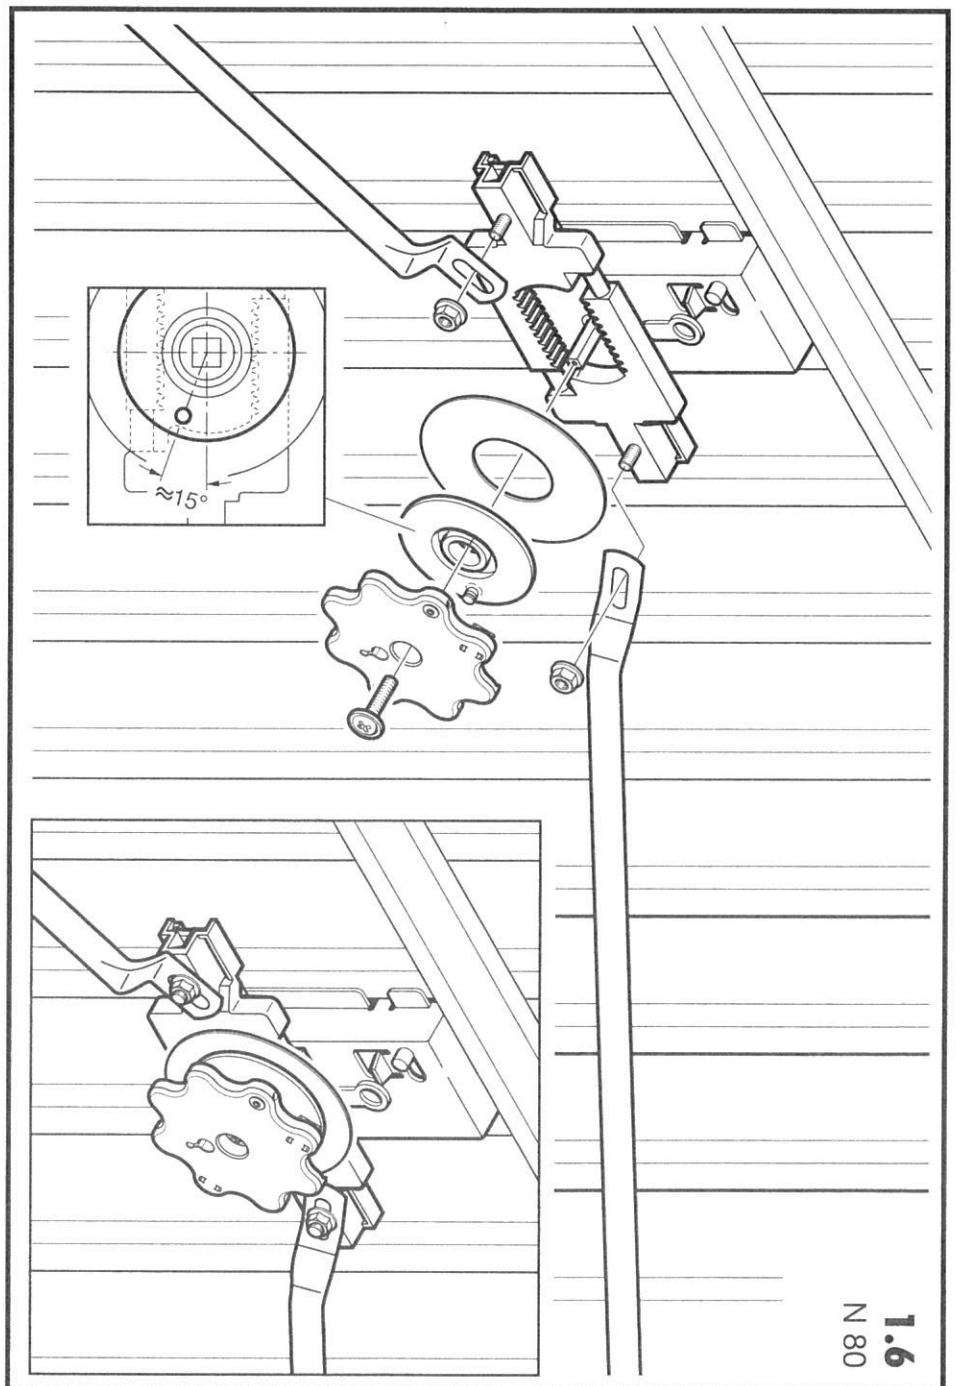


12.2006 TR30A017-A RE

  43 9906 TD000A17 A DT

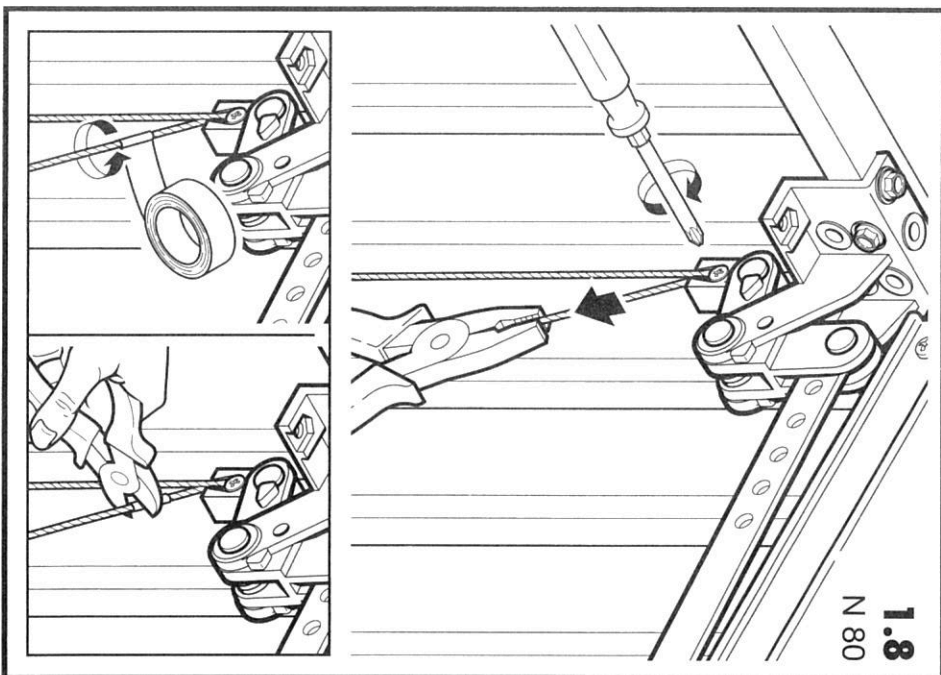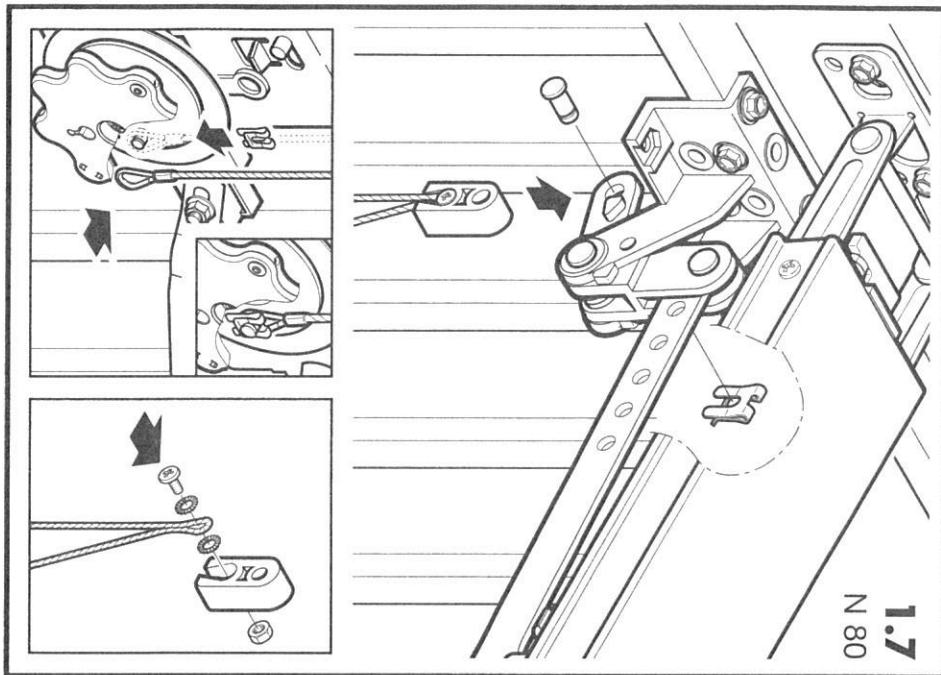

3


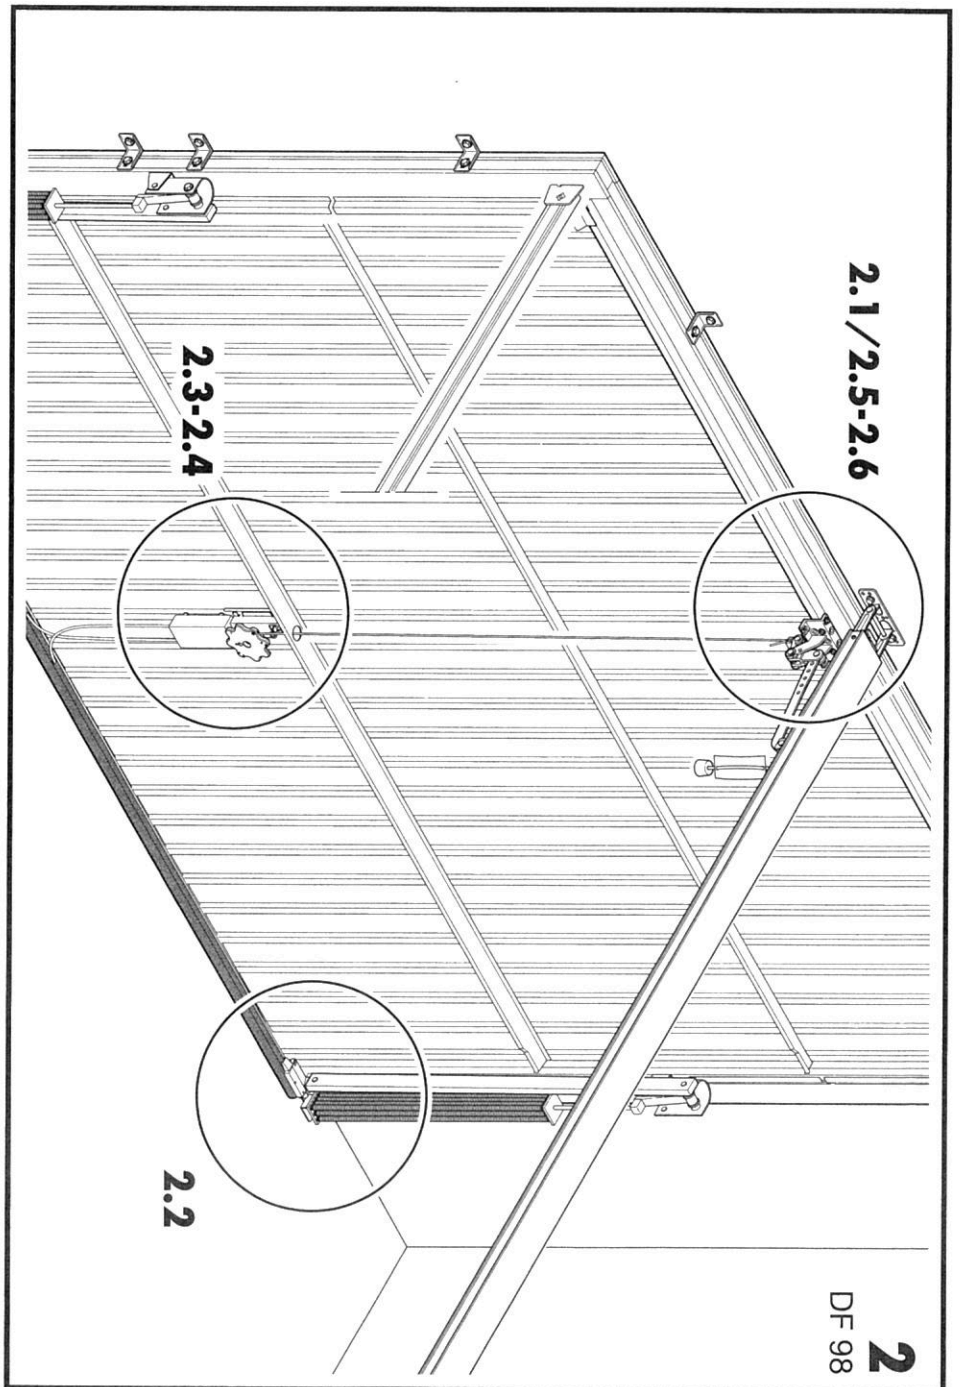 


36

12.2006 TR30A017-A RE





  19 2006 TD20017-A DE

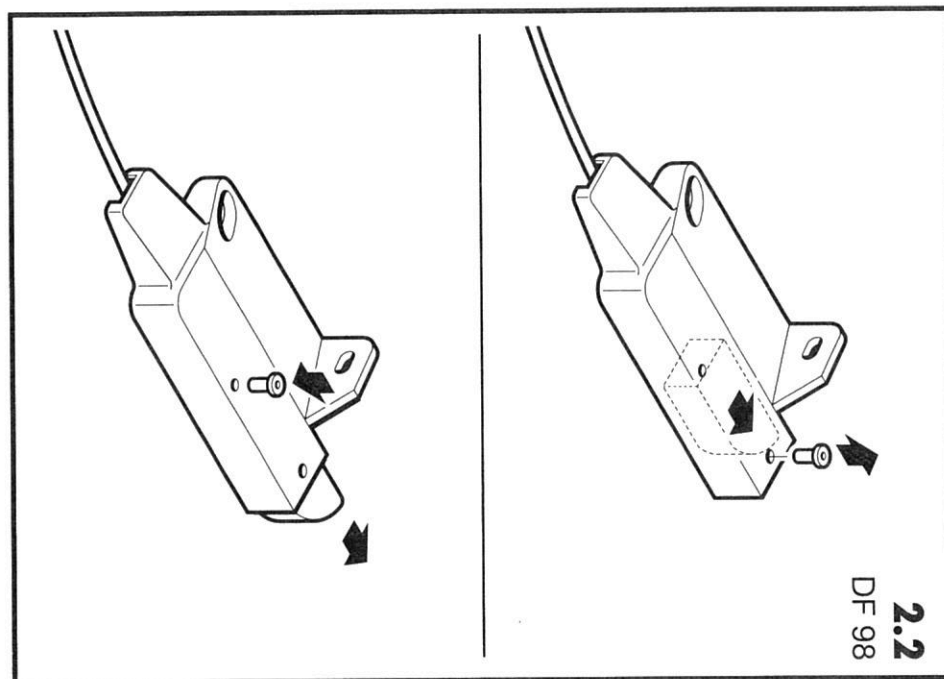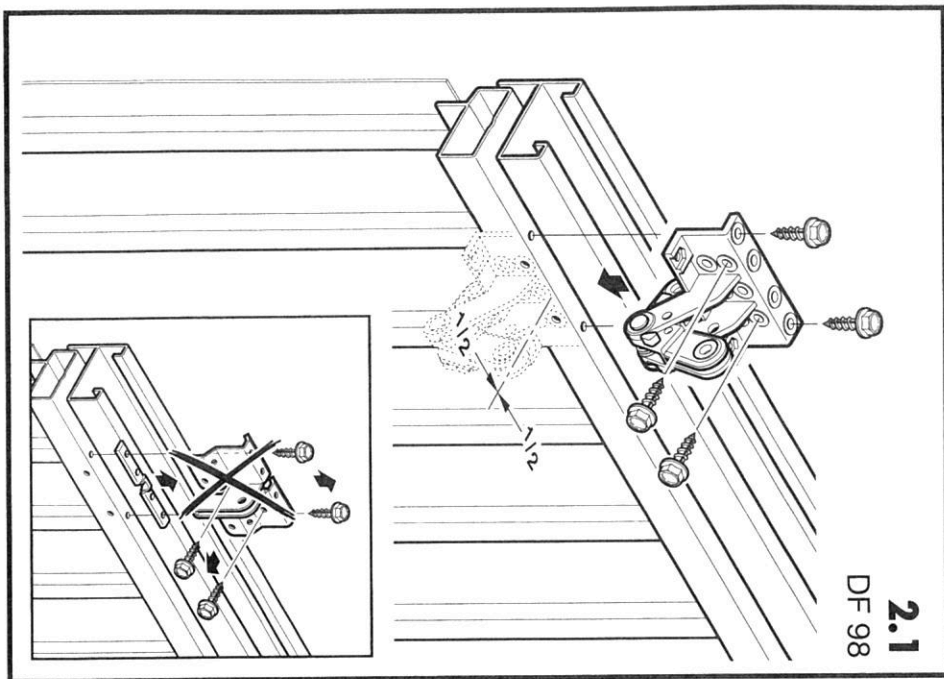

37

  38

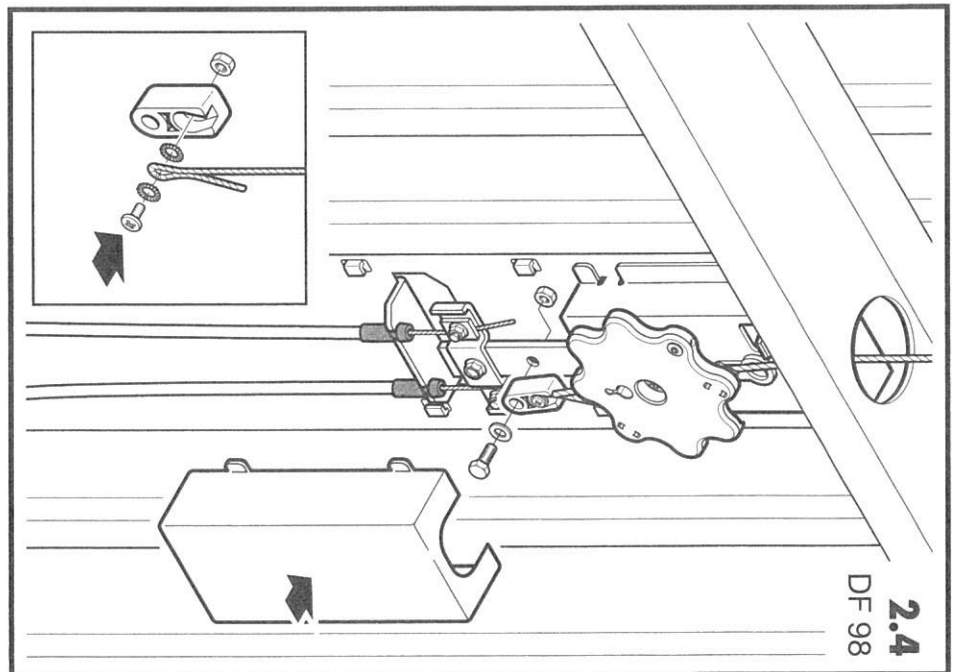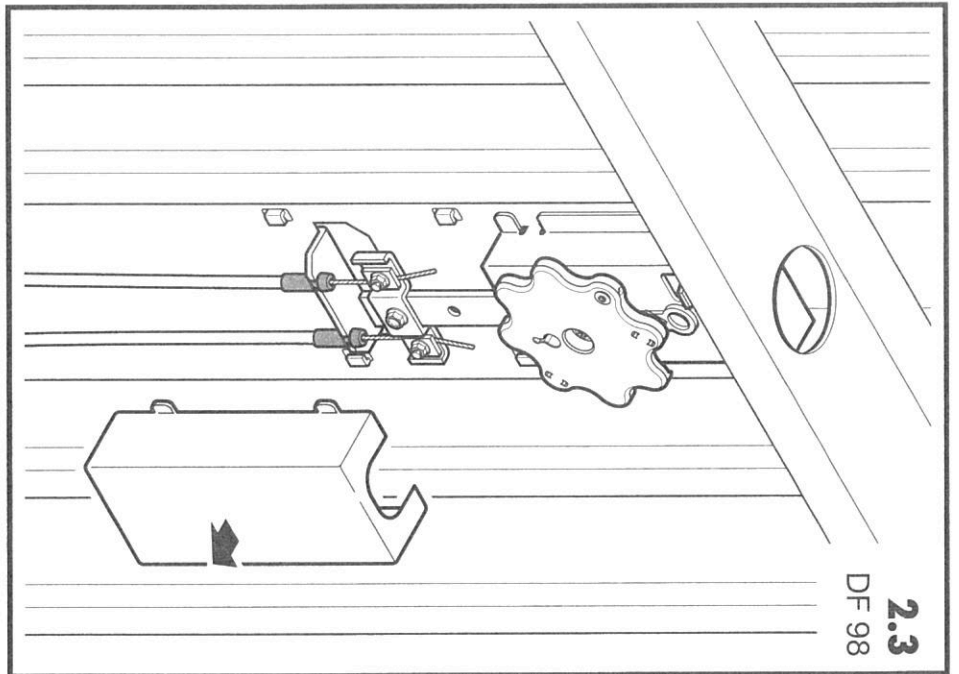

12.2006 TR30A017-A-RE

